


Installation of IsoMax Sound Isolation Clips Wall or Ceiling

Step 1

Attach clips per Kinetics layout guidelines for walls or ceilings.
See attached layout drawings.

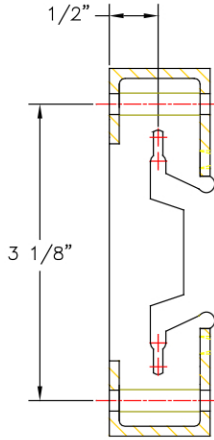


Step 2

Secure clips with a single fastener on one end only.

Wood - Use #8 x 2-1/2" coarse thread screws

Steel - Use #8, 10, or 12 x 1-5/8" self-tapping Type S screws

Concrete or Masonry - Use 3/16" dia x 2-1/4" Tapcon or equal anchor

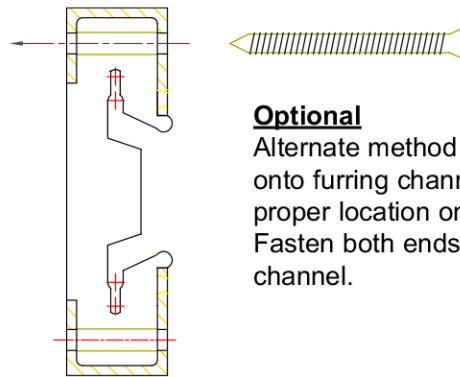


Optional

Alternate method for Step 2. Snap clips onto furring channel. Hand slide clips to proper location on the furring channel. Fasten both ends of the clip to secure the channel.

Step 3

Grip unsecured rubber end, snap in channel. Secure with second screw/anchor.

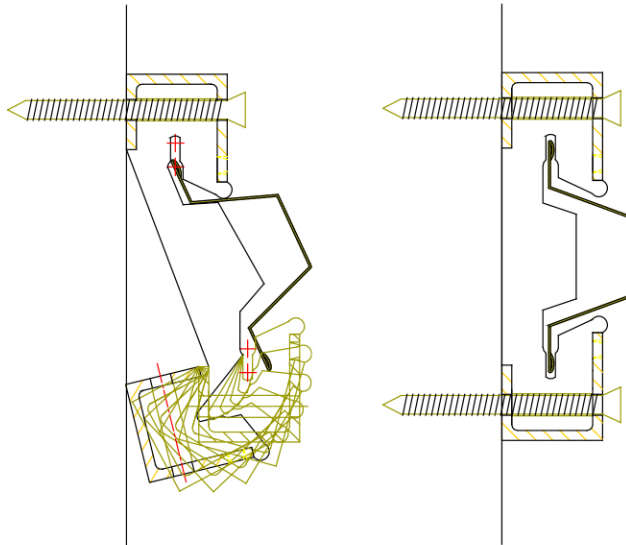

Furring Channel Requirements


Minimum 25 ga with hemmed edge.

Standard - 7/8" deep channel

Optional - 1-1/2" deep channel for additional furring space.

Splice furring channel with a 6-in overlap and secure overlapped pieces with wire or screws per standard industry practice.

Furring Channel Dimensions

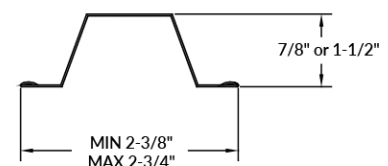

Load Specification for IsoMax Clips

The IsoMax clip is designed to carry a drywall furring channel (hat track) with one or more layers of gypsum wallboard attached. THE LOAD CAPACITY OF THE CLIP DEPENDS ON THE GAGE OF FURRING CHANNEL USED. Lighter, 25 ga, furring channel carries less load than 22 ga channel. The maximum design load capacity for the IsoMax clip in shear (wall application) or in tension (ceiling application) is as follows. Design load calculations are based on tested loading to failure where the furring channel deforms and pulls out.

	Design Load Maximum for <u>Wall or Ceiling Application</u>	
	<u>2:1 safety factor</u>	<u>2.5:1 safety factor*</u>
IsoMax clip with 25 ga steel furring channel	45 lbs.	36 lbs.
IsoMax clip with 22 ga steel furring channel	60 lbs.	48 lbs.

Note: 5/8" thick gypsum wallboard weighs 2.3 lbs/sq ft. 1/2" thick gypsum wallboard weighs 1.85 lbs/sq ft.

* Suggested safety factor of 2.5:1 for more critical life safety applications; i.e., hospitals

Installation of IsoMax Sound Isolation Clips - Walls and Ceilings

Spacing of clips on the furring channel shall be a maximum of 48 inches.

- Spacing between furring channels shall be a maximum of 24 inches.
- Use only the required size and gage of furring channel per the Furring Channel Requirements section and Load Specification section of this document.
- (Walls only) The first layer of gypsum wallboard shall align seams between sheets on the centerline of the horizontal furring channels.
- (Walls only) The bottom row of clips with furring channel(s) should be a maximum 3 inches to the center of the channel from the floor. The top row should be within 6 inches of the ceiling.
- (Walls only) The first row of gypsum wallboard sheets at the bottom of the wall shall be installed with the long dimension supported on a 1/4 inch thick continuous resilient isolation strip, Kinetics Model RWS.
- (Ceilings only) The IsoMax clips should be within 12 inches of the ceiling perimeter at the end of the furring channel run.
- (Ceilings only) The first row of channel at the ceiling perimeter should be a maximum 6" from the wall.
- Furring channels are installed perpendicular to the framing members.
- If used, second layer of gypsum board should be staggered a minimum of 12" over the joint.

General Information

All potential sound leaks; gaps around outlets, window, or door frames; pipe penetrations and the like should be sealed with a non-hardening acoustical sealant or resilient putty.

Note: See Kinetics Model Sealtight Outlet Backers.


Fire-rated wall and ceiling assemblies and the specific construction requirements are listed at:

Go to www.ul.com.

On-line Certification Directory - Type **Kinetics Noise Control** in Search by Company.

Links to Listings will be displayed.

DIMENSIONS SHOWN ARE TYPICAL. SEE ONLINE
INSTALLATION GUIDELINES FOR MORE DETAIL.

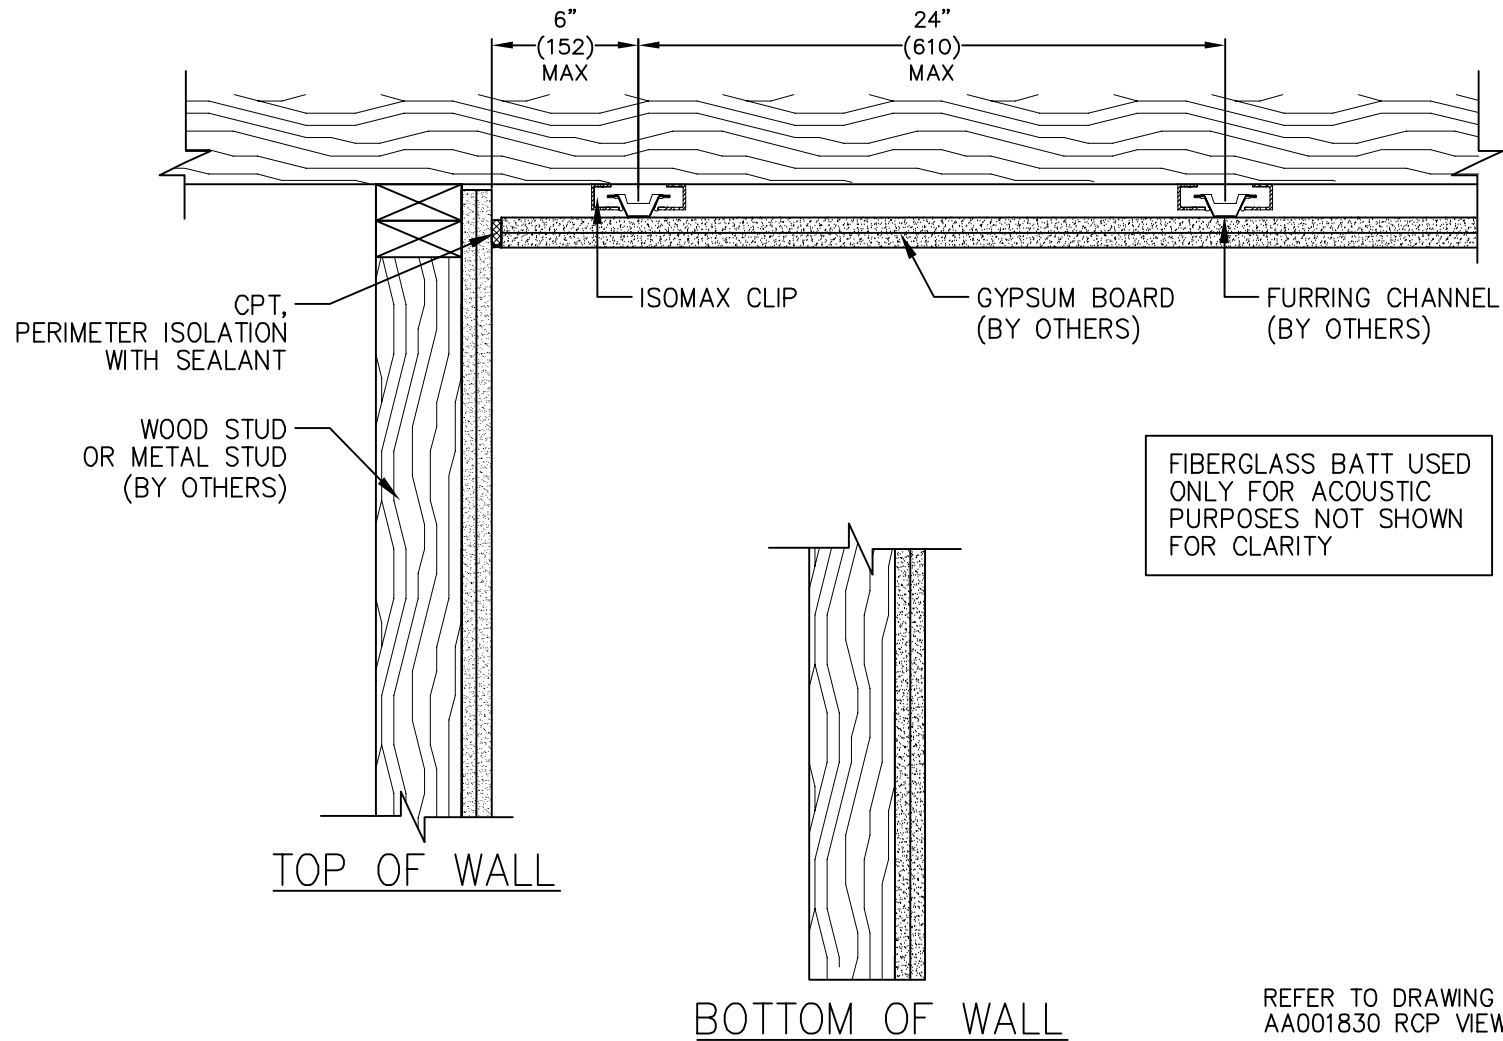

REFER TO DRAWING AA001808 FOR PLAN /
AA001830 RCP VIEWS

DIMENSION FORMAT: IN (mm)



TITLE

ISOMAX CLIPS
ISOLATED CEILINGS


LAST DATE
REVISED
04/24/14

REVISED BY
MDV

DRAWING NO.
AA001805

AA

DIMENSIONS SHOWN ARE TYPICAL. SEE ONLINE
INSTALLATION GUIDELINES FOR MORE DETAIL.

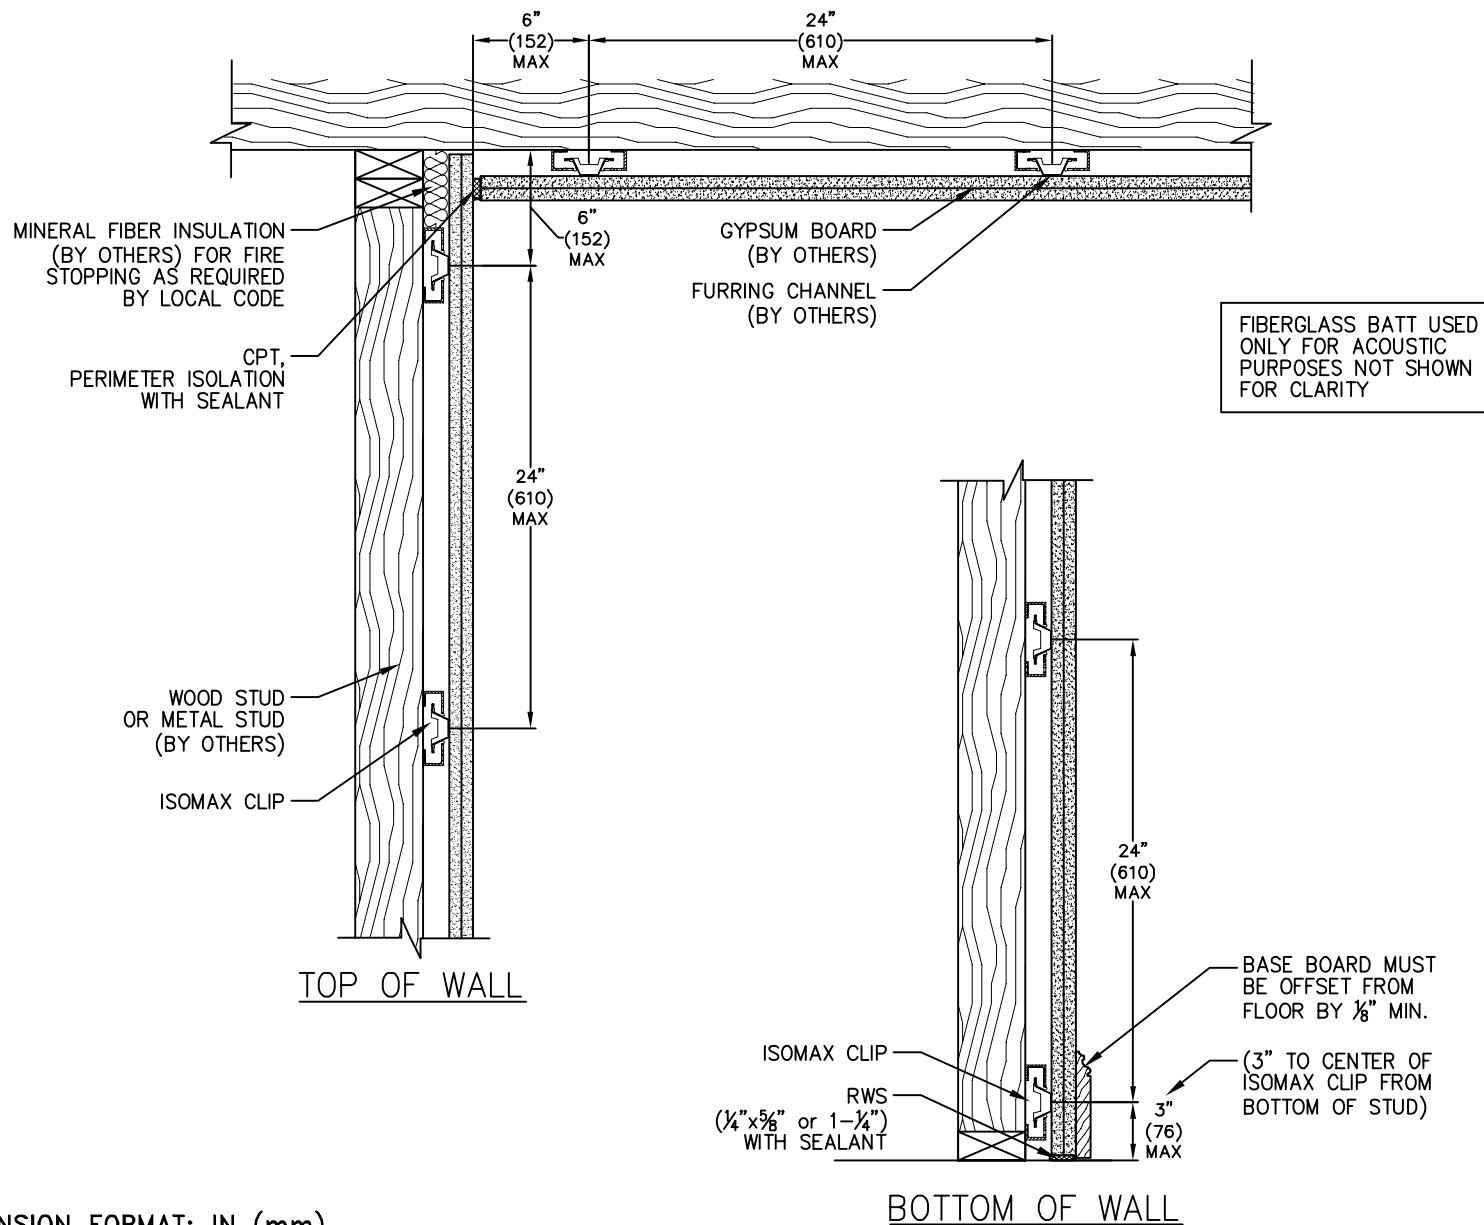

DIMENSION FORMAT: IN (mm)

REFER TO DRAWING AA001808 FOR PLAN /
AA001829 ELEVATION VIEWS



TITLE

ISOMAX CLIPS
ISOLATED WALLS
AND CEILINGS

LAST DATE
REVISED

01/07/14


REVISED BY

TJM

DRAWING NO.


AA001806

AA

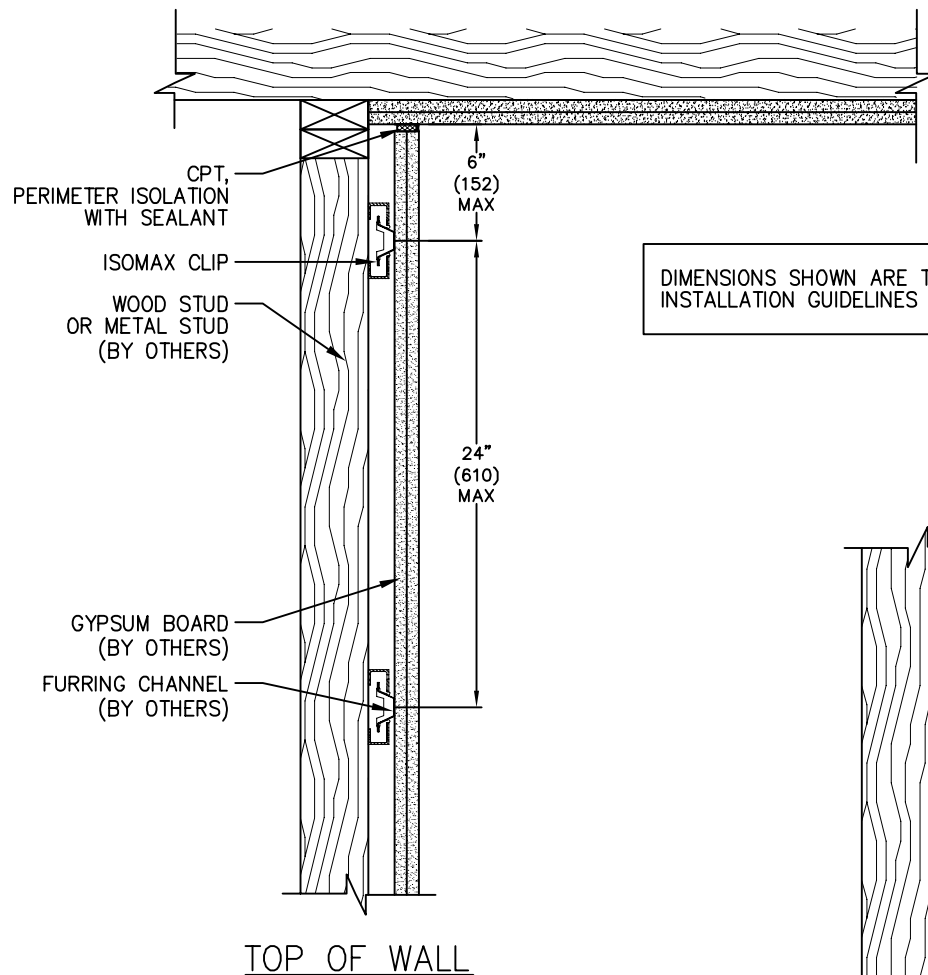

DIMENSIONS SHOWN ARE TYPICAL. SEE ONLINE INSTALLATION GUIDELINES FOR MORE DETAIL.

FIBERGLASS BATT USED ONLY FOR ACOUSTIC PURPOSES NOT SHOWN FOR CLARITY

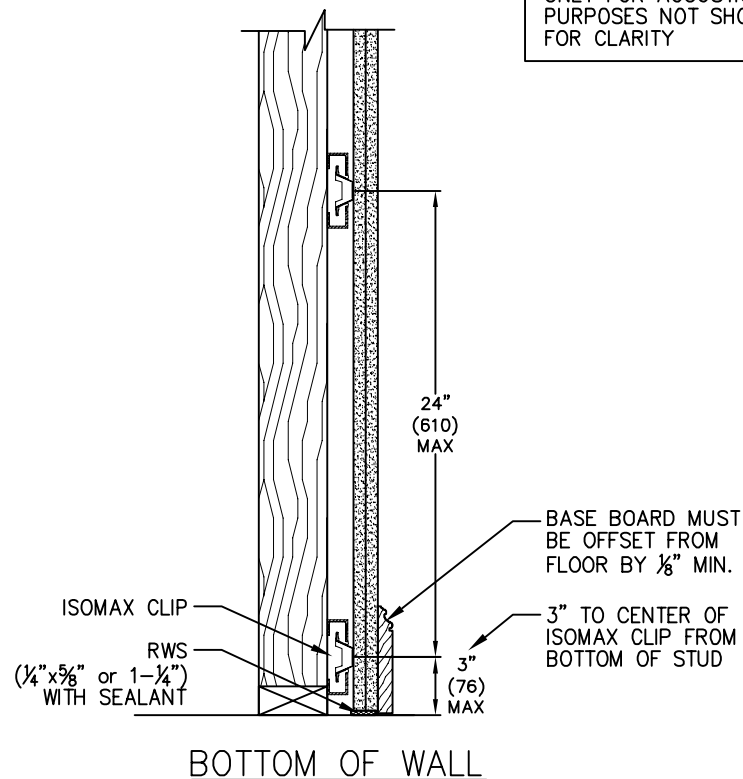

DIMENSION FORMAT: IN (mm)

REFER TO DRAWING AA001808 FOR PLAN / AA001829 ELEVATION VIEWS



TITLE


ISOMAX CLIPS
ISOLATED WALLS

LAST DATE
REVISED
01/07/14


REVISED BY
TJM


DRAWING NO.
AA001807

AA

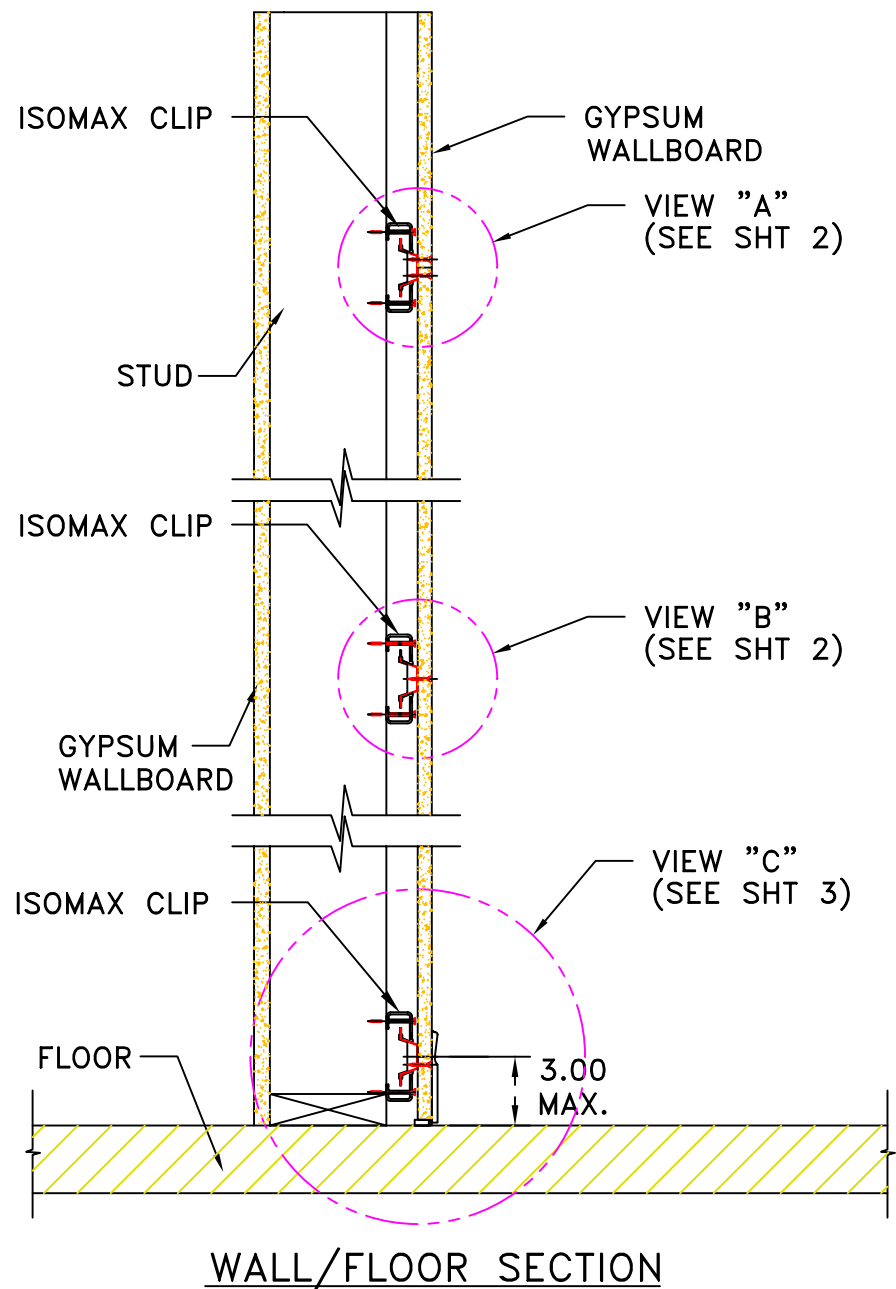


NOTE: FOR ACOUSTICAL ISOLATION
BASE BOARD OR ANY OTHER
WALL ATTACHMENTS MUST NOT
TOUCH THE FLOOR.

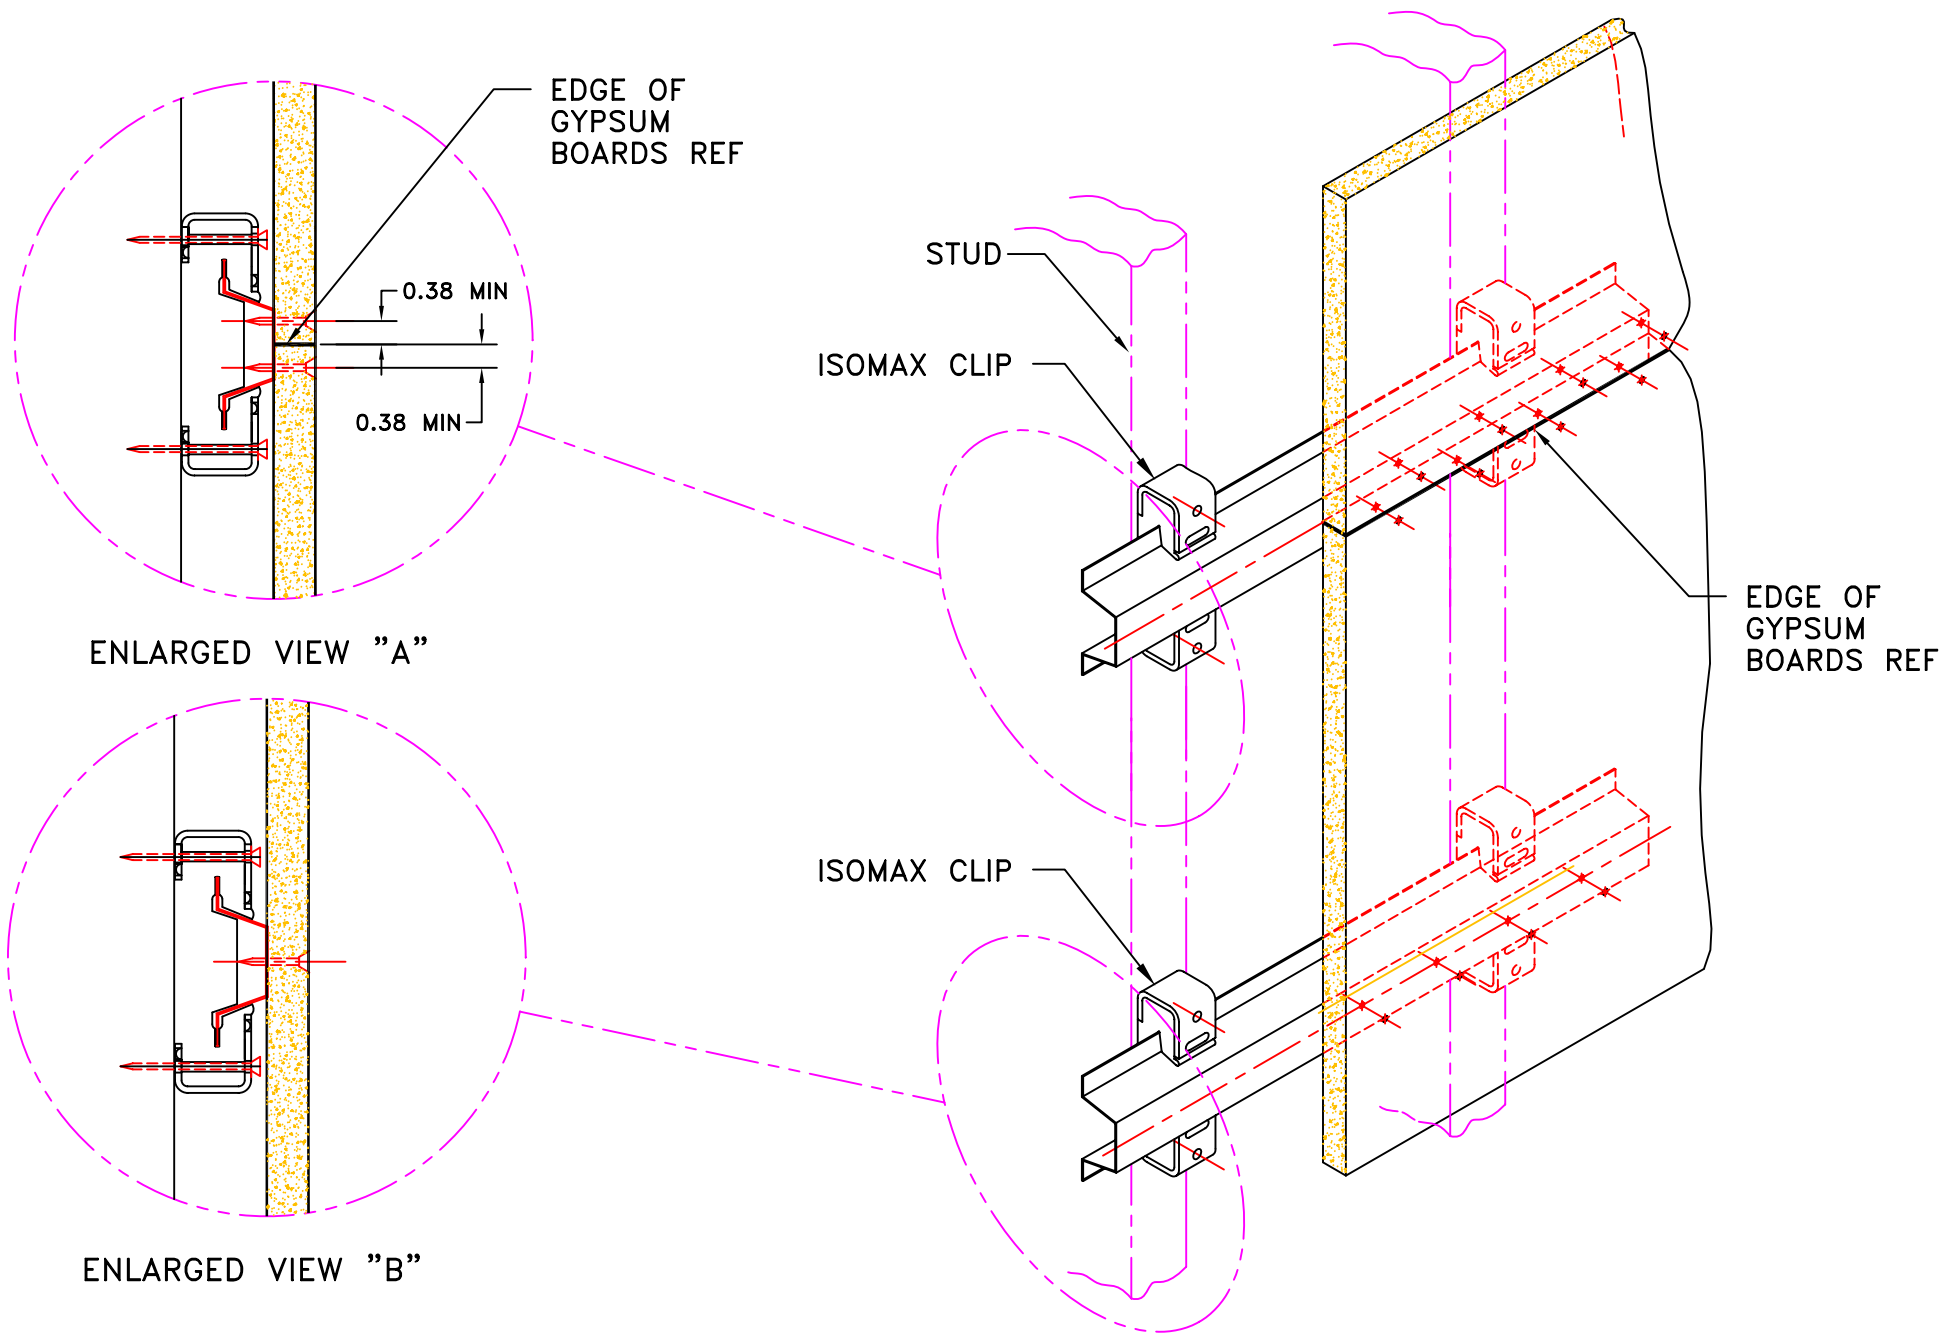

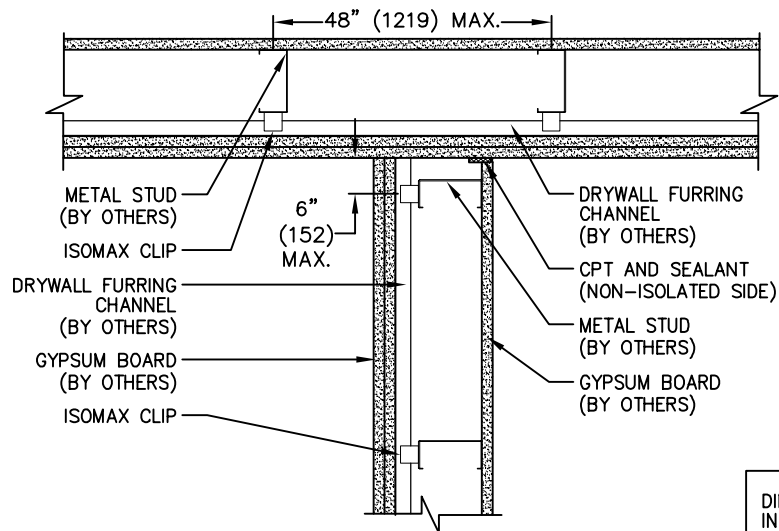


PLAN VIEW
INTERSECTION AT
TWO ISOMAX WALLS

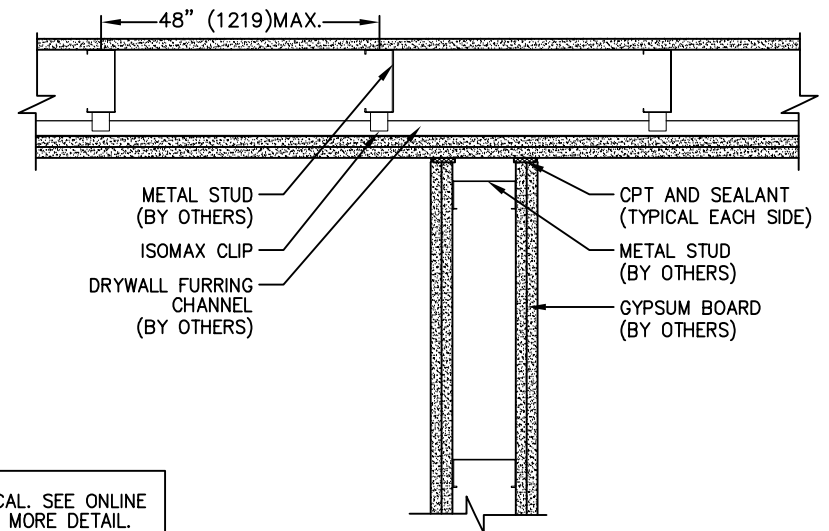

PLAN VIEW
INTERSECTION AT
ISOMAX & NON-ISOMAX WALL

DIMENSIONS SHOWN ARE TYPICAL. SEE ONLINE
INSTALLATION GUIDELINES FOR MORE DETAIL.

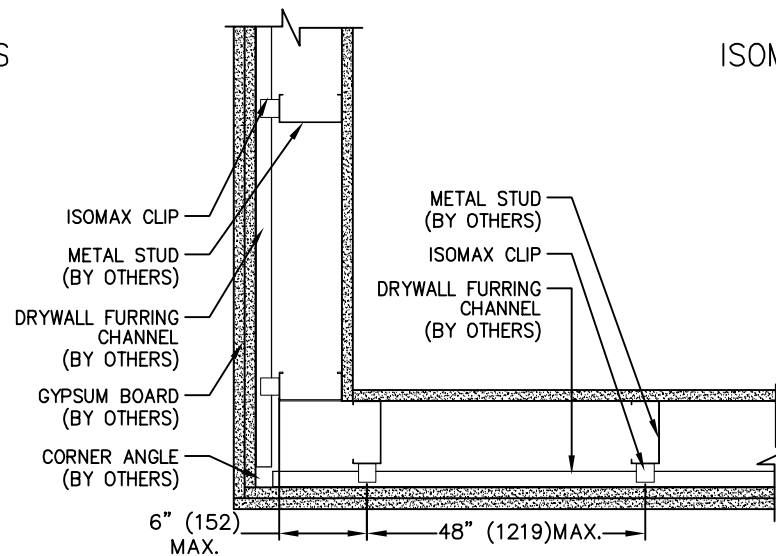

PLAN VIEW
CORNER INTERSECTION

DIMENSION FORMAT: IN (mm)

REFER TO DRAWINGS AA001805, 06, 07 FOR
SECTIONS / AA001829 ELEVATION VIEWS




TITLE
ISOMAX CLIPS
PLAN VIEW
TYPICAL WALL INTERSECTIONS

LAST DATE
REVISED
01/09/14

REVISED BY
TJM

DRAWING NO.
AA001808

AA

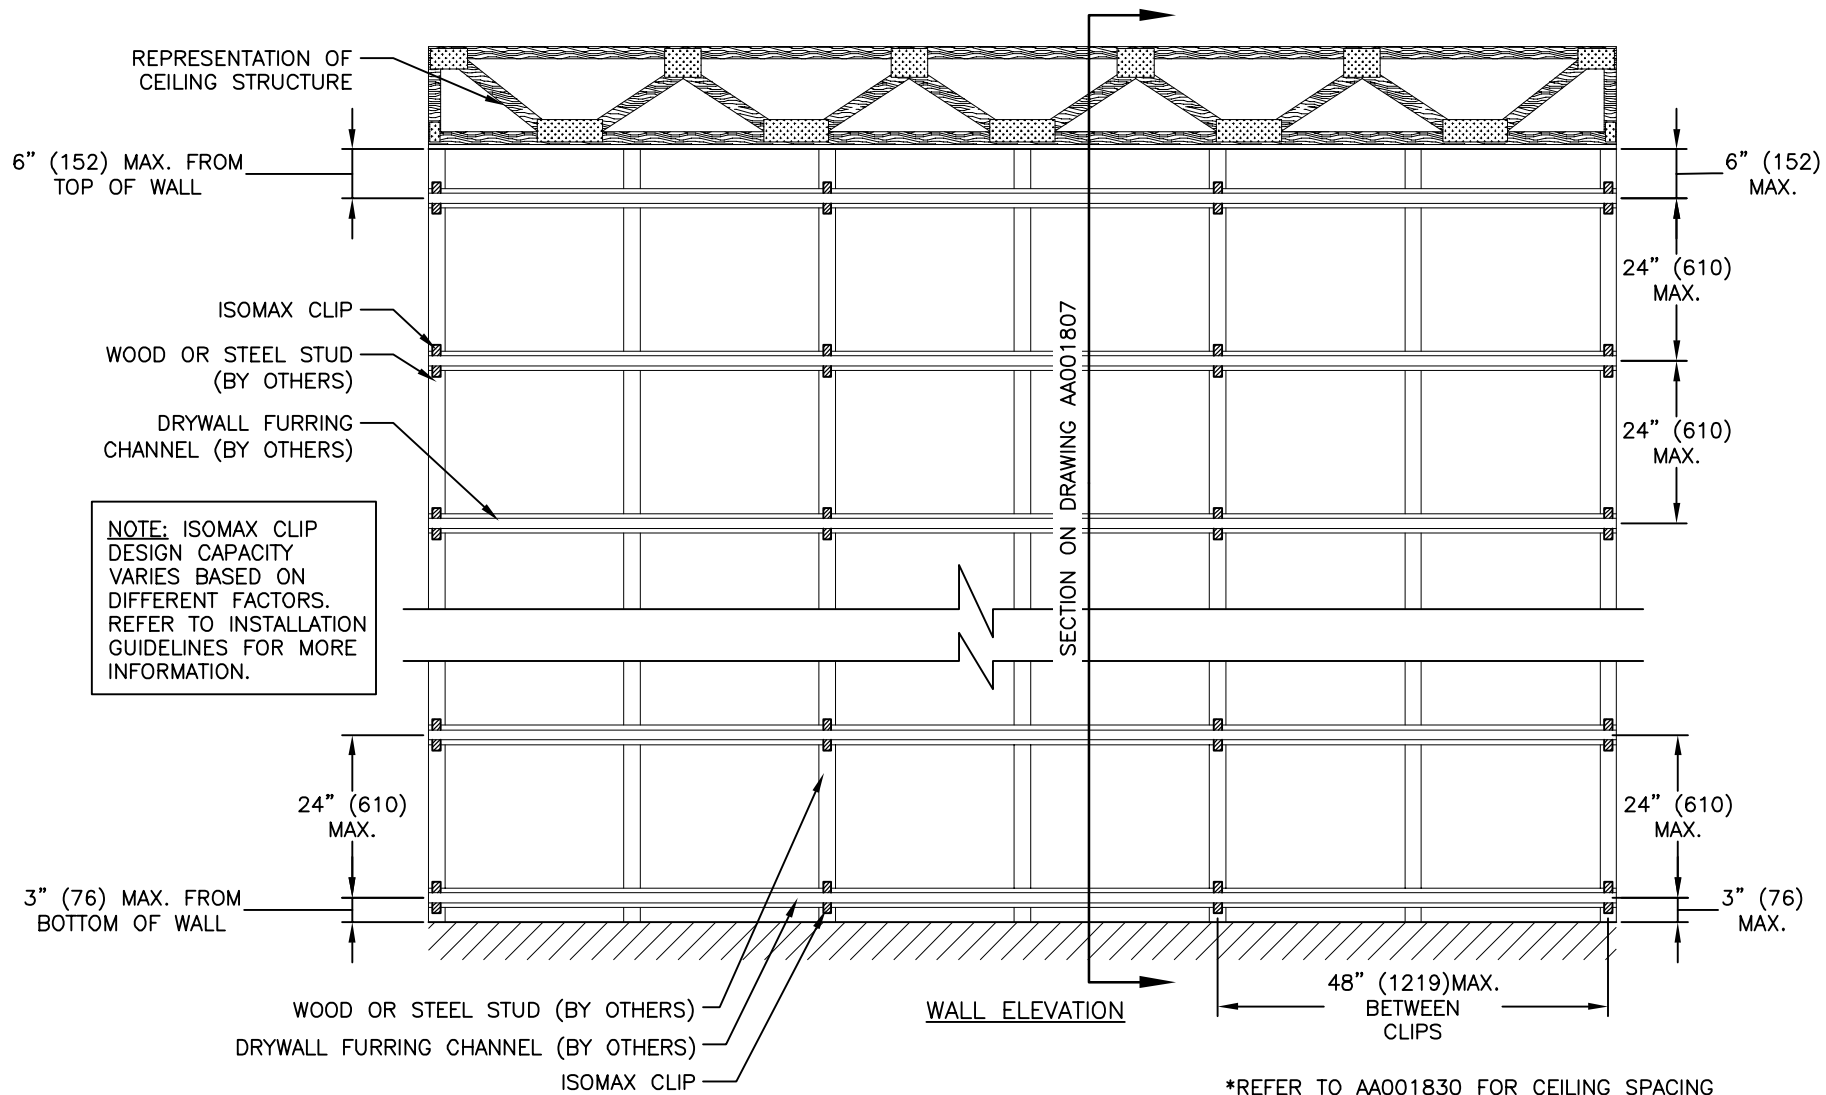

DIMENSION FORMAT: IN (mm)

